

When Pr.00-10 = 0, and you set Pr.00-11 to 2, the space vector control diagram is as follows:

IM Space Vector Control (IMSVVC):

