

When Pr.00-10 = 0, and you set Pr.00-11 to 0, the V/F control diagram is as follows.

